


## LAYFLAT HOSE INSTALLATION

As per the pictures below, all layflat hoses must be coupled in the following manner to prevent the inner tube from being damaged or cut, whilst the clamp is being tightened. Warranty will be instantly void if these procedures are not followed.

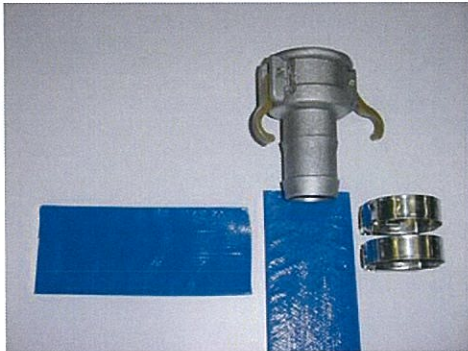

To make this outer sleeve, just cut the hose shorter by twice the diameter and then slit it lengthwise to give you enough length to wrap this sleeve around the hose. The sleeve can also extend 50mm past the end of the fitting, which assist the hose when it is pulled at 90 degrees. A helpful hint is to hold this in place with tape so this gives you time to correctly position the clamps away from the barbs on the hose fitting. (This is a common area where the inner tube is pinched by the outer clamp)

Also it pays to offset each clamp, so that even pressure is applied around the clamps.

# adelaide belt & hose

42 Scotland Road Mile End S A 5031  
Phone 08 8234 1155 Fax 08 8234 2255